

UltraLink Firmware upgrade instructions

UltraLink Viewer program

This is the installation program for the Viewer. Download the ULVxxx.exe file and run it. It will replace the old Viewer and not change any settings.

UltraLink Unit

Download the ULPxxx.bin file, where xxx is the version number. Log into the UltraLink from the Viewer. From the File-Update Flash tab, browse for the file you previously downloaded and select it. You will see a download dialog box with a progress bar as the Viewer sends the file to the UltraLink unit. You will be logged out out of the Viewer automatically. Wait about a minute and log in again and the new firmware will be active.